



VANESSENTIAL

VENTURE CLEAN SHOWER SET


What's Included:

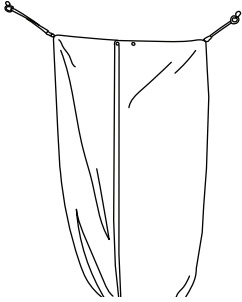


1X Indoor Shower Curtain



1X Water Basin

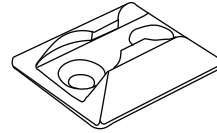


4X Single Stud Mount

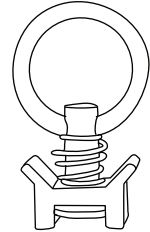


4X Stainless Steel Ring


1. If you do not have I-track mounted to the ceiling of your van, use the included single stud mounts to create attachment points on the ceiling. You will need a drill and M6 screws to secure your single stud mount in place.

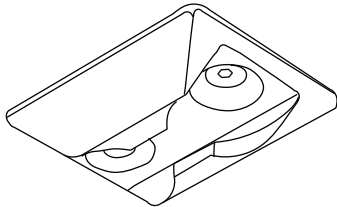

2. Attach your Single Stud with Stainless Steel Rings to the mounts / L-Track to create four corners.

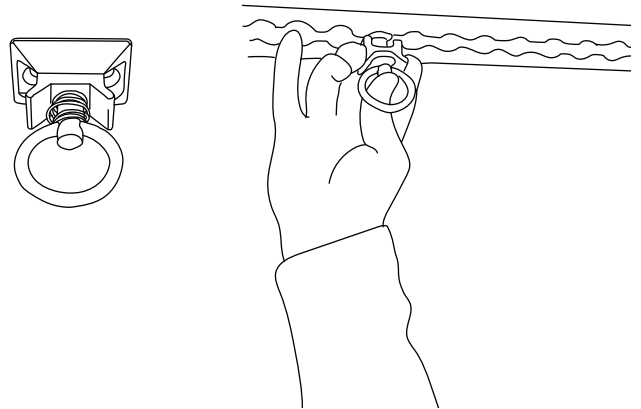

3. Open your basin on the floor where you want to take your shower.

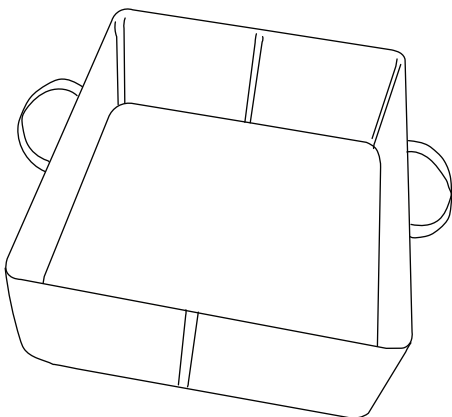


4. Orient your shower curtain so that the straps are on top, and the hose opening is facing your water source.




VENTURE CLEAN SHOWER SET

- 5.** Thread one strap through each Single Stud with Stainless Steel Rings and secure the clips to fasten.

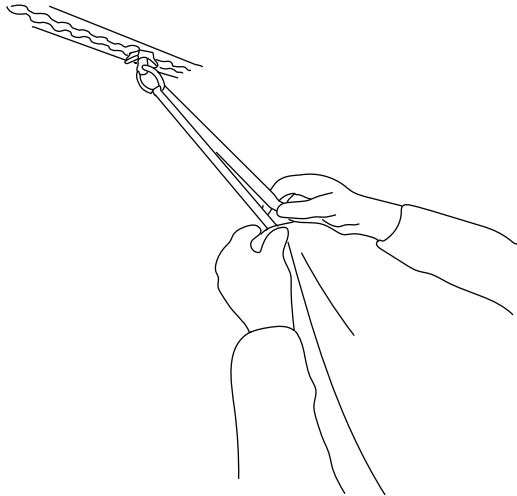

- 6.** Depending on your hose shower attachment, either secure the head over the top of the curtain with the velcro straps, or thread it through the hose opening on the side of the curtain and secure it with the loop.

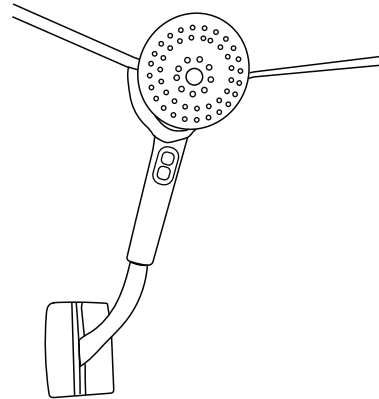

- 7.** Ensure the bottom of the curtain is inside the basin and that the buttons and magnets at the front of the curtain are closed. The basin has 8 gallons of capacity, so keep an eye on how full it is as you shower.



- 8.** After showering, unhook the straps from the rings, and take your curtain outside to hang up to dry. Then, take your water basin outside and pour out the water.



- 9.** Stay clean on the road!

